

EN Installation Manual: www.arctic.ac/fileadmin/a11p/manual_en.pdf
 DE Montageanleitung: www.arctic.ac/fileadmin/a11p/manual_de.pdf
 FR Guide d'installation: www.arctic.ac/fileadmin/a11p/manual_fr.pdf
 ES Manual de instalación: www.arctic.ac/fileadmin/a11p/manual_es.pdf
 PT Manual de Instalação: www.arctic.ac/fileadmin/a11p/manual_pt.pdf
 SE Installationsmanual: www.arctic.ac/fileadmin/a11p/manual_se.pdf

CZ Instalační příručka: www.arctic.ac/fileadmin/a11p/manual_cz.pdf
 HU Telepítési kézikönyv: www.arctic.ac/fileadmin/a11p/manual_hu.pdf
 PL Instrukcja montażu: www.arctic.ac/fileadmin/a11p/manual_pl.pdf
 NL Installatiehandleiding: www.arctic.ac/fileadmin/a11p/manual_nl.pdf
 RU Руководство пользователя: www.arctic.ac/fileadmin/a11p/manual_ru.pdf
 IT Manuale di installazione: www.arctic.ac/fileadmin/a11p/manual_it.pdf

| Accessories | | | |
|-------------|----------|------------------|--|
| Screw (M3) | Push pin | Mounting bracket | |
| | | | |

Uninstall the boxed cooler

-
-
-
- Clean and remove the paste residue with a tissue paper carefully

Install the Alpine 11 PLUS

-
-
-
-
-
-

Thermal Compound
 Thermal compound is pre-applied to the heat sink of this cooler. If the cooler has to be installed a second time, we highly recommend MX-4 from ARCTIC. This is the only compound that can guarantee optimal performance in combination with the surface of our heat sink.

Warranty
 This ARCTIC product includes a six-year limited warranty. Please visit warranty.arctic.ac for further details.

© 2013 ARCTIC (HK) Ltd. All Rights Reserved.