

# User Manual

## **myPhone 1045/1082**



Thank you for choosing our phone.  
Please read the manual carefully.

**myPhone 1045/1082** is designed for use  
in GSM 900/1800 MHz.

Large keys with clear lettering, contrast,  
colour display, flashlight and Bluetooth  
mark your **myPhone 1045/1082**.

## **SAFETY**

Read these simple guidelines. Not following them may be dangerous or illegal.

### **DO NOT RISK**

Do not switch the telephone on when mobile phone use is prohibited or if it may cause interference or danger.

### **SAFETY WHILE DRIVING A CAR**

Do not use the phone while driving a car.

## **INTERFERANCE**

All wireless devices may be susceptible to interference, which could affect performance.

## **RESTRICTED AREAS**

Turn the device off in aeroplane, as it may interfere with devices on the plane.

Your phone can interfere with medical equipment in hospitals and health care facilities. It should be applied to all kinds of prohibitions, regulations and warnings provided by medical personnel.

## **QUALIFIED SERVICE**

Only qualified personnel may install software or repair this product.

Repairs by unqualified phone service or by an unauthorized service centre may

damage your phone and cause a loss of your warranty.

## **BATTERY AND ACCESSORIES**

Always try to store the battery in temperatures between 15 and 25 degrees Celsius (59° and 77° F). Extreme temperatures decrease battery's capacity and vitality.

Avoid contact with liquids and metal objects. Such contact can lead to total or partial damage of the battery.

Use the battery only for its intended purpose.

Unplug unused charger from the power supply.

Overcharging can damage the battery. Therefore, you should not charge the batteries for more than 3 days.

Use only original myPhone accessories which are available with your phone.

## **WATERPROOF**

This device is not waterproof. Protect it from moisture.

## **EMERGENCY CALLS**

In some areas or in certain circumstances emergency calls from your phone may not be possible. It is recommended to find an alternative way to notify emergency services if you are going to undeveloped or remote areas.

## **CHILDREN**

Your phone is not a toy. Keep your device and its accessories out of reach of children.

## **USING THE MANUAL**

Before using the device, refer to information about precautions and instructions for your phone. All descriptions in this manual are based on default settings of the phone.

The latest version of the User Manual can be found on the website:  
[www.myphone.pl](http://www.myphone.pl).

Depending on installed version of software, service provider, SIM card or country, some of the descriptions used in USER MANUAL may not correspond with functions of the phone, descriptions or names used in menu.

Depending on country, SIM card operator, this mobile's software and all the accessories may differ from those shown in the pictures in USER MANUAL.

**Produced by:**

myPhone Sp. z o.o.

ul. Krakowska 119

50-428 Wrocław

Polska

Telephone: (+48 71) 71 77 400

E-mail: [pomoc@myphone.pl](mailto:pomoc@myphone.pl)

Website: [www.myphone.pl](http://www.myphone.pl)



# Contents

<u>Contents.....</u>	<u>10</u>
<u>myPhone kit contents 1045/1082.....</u>	<u>14</u>
<u>1. Your mobile phone – introduction.....</u>	<u>16</u>
<u>View of the phone, keypad, features.....</u>	<u>16</u>
<u>Turning the phone on/off.....</u>	<u>18</u>
<u>SIM card, memory card and battery</u>	
<u>inserting.....</u>	<u>19</u>
<u>Battery charging.....</u>	<u>21</u>
<u>Charging without charging base.....</u>	<u>21</u>
<u>Charging with the use of charging base... </u>	<u>22</u>
<u>Low battery indicator information.....</u>	<u>23</u>
<u>2. Using the basic features.....</u>	<u>23</u>
<u>Menu access.....</u>	<u>23</u>
<u>Customize your phone.....</u>	<u>24</u>
<u>Enable or disable the silent mode.....</u>	<u>24</u>
<u>Sounds and user profiles.....</u>	<u>25</u>
<u>SOS key settings.....</u>	<u>28</u>
<u>Phone lock.....</u>	<u>31</u>
<u>Connectivity options.....</u>	<u>31</u>

<u>Making a phone call.....</u>	<u>31</u>
<u>Answering the phone.....</u>	<u>32</u>
<u>Text messages.....</u>	<u>32</u>
<u>Sending SMS message.....</u>	<u>32</u>
<u>Message displaying.....</u>	<u>35</u>
<u>Phone book in myPhone 1045/1082.....</u>	<u>35</u>
<u>    Add new contact.....</u>	<u>35</u>
<u>    Search for contact.....</u>	<u>36</u>
<u>    Delete contacts.....</u>	<u>37</u>
<u>3. Using advanced features.....</u>	<u>38</u>
<u>    Calling a contact from Phone book .....</u>	<u>38</u>
<u>    Missed calls.....</u>	<u>38</u>
<u>    Loudspeaker.....</u>	<u>39</u>
<u>    Speed dial.....</u>	<u>40</u>
<u>    International calls.....</u>	<u>41</u>
<u>4. Other features.....</u>	<u>41</u>
<u>    Date and time setting.....</u>	<u>41</u>
<u>    Language settings.....</u>	<u>42</u>
<u>    Display settings.....</u>	<u>42</u>
<u>    Call settings.....</u>	<u>44</u>
<u>    Alarm configuration.....</u>	<u>44</u>
<u>    Calculator.....</u>	<u>45</u>

<u>Factory settings.....</u>	<u>46</u>
<u>Flashlight.....</u>	<u>46</u>
<u>Call history.....</u>	<u>47</u>
<u>Tasks.....</u>	<u>47</u>
<u>Audio player.....</u>	<u>48</u>
<u>FM radio in myPhone 1045/1082.....</u>	<u>50</u>
<u>Calendar.....</u>	<u>52</u>
<u>Bluetooth.....</u>	<u>52</u>
<u>Pairing Bluetooth devices.....</u>	<u>54</u>
<u>Sending files via Bluetooth.....</u>	<u>55</u>
<u>Icons in your mobile phone.....</u>	<u>55</u>
<u>Troubleshooting.....</u>	<u>56</u>
<u>5. Care and maintenance.....</u>	<u>59</u>
<u>Comments on the proper battery use.....</u>	<u>59</u>
<u>Phone maintenance.....</u>	<u>62</u>
<u>Safety information.....</u>	<u>63</u>
<u>Safety while driving a car.....</u>	<u>63</u>
<u>Environment safety.....</u>	<u>64</u>
<u>Technological criteria.....</u>	<u>65</u>
<u>SAR certification information.....</u>	<u>66</u>
<u>Proper disposal of used electrical and electronic equipment.....</u>	<u>67</u>

Statement of complience.....70

## **myPhone 1045/1082 contents:**

Before using your phone, make sure all the following items are included in the box:

 
- the phone myPhone 1045/1082,
- battery,
- charger,
- charging base,
- headset,
- user manual,
- warranty card.

If any of the above items is missing or damaged, please contact your dealer.

myPhone 1045/1082 set has a sticker containing the IMEI and serial number on the packaging. Therefore it is recommended to keep the packaging in case of any complaint. Keep the container out of reach of children.

# 1. Your mobile phone - introduction

The view of the phone, it`s keypad and features are shown on the picture below:

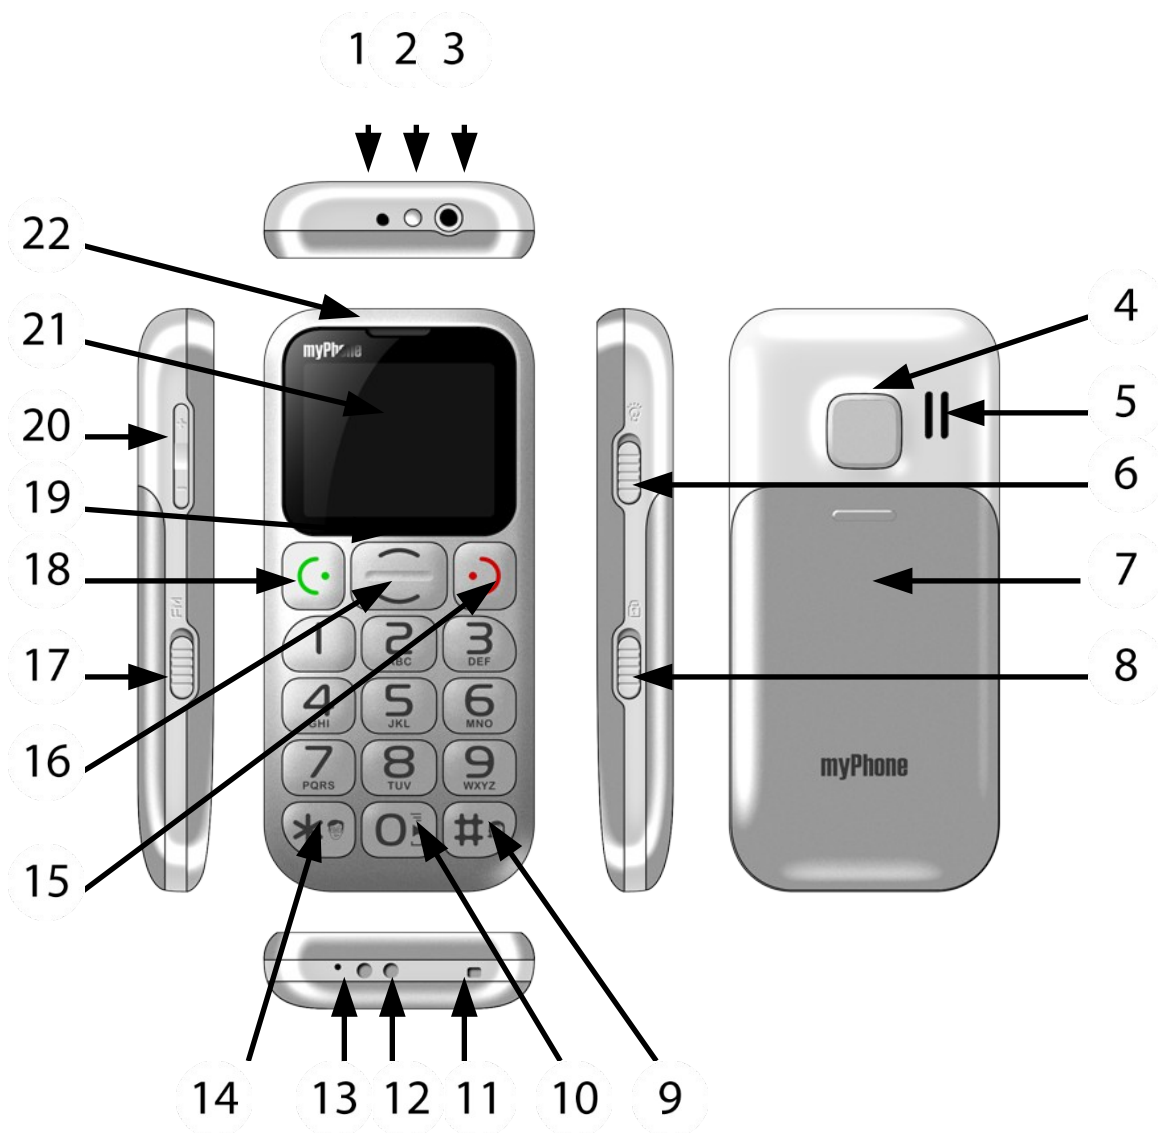

- 1.Charging slot
- 2.Flashlight
- 3.Headset slot
4. **<SOS>** key
- 5.Buzzer
- 6.Flashlight key
- 7.Battery cover
- 8.Keypad lock
9. Key **<#>**
10. Key **<0>**
- 11.Leash bracket
- 12.Charging base connector
- 13.Microphone



14. Key <\*>

15. Key <red handset>

16. Navigation key <down>

17. Radio FM

18. Key <green handset>

19. Navigation key <up>

20. Volume control

21. Display

22. Ear speaker

## ***Turning the phone on and off***


**\* Attention:** Do not switch the phone in places where using mobile phones is forbidden or when it may cause interference or danger.

To turn on the phone press and hold the **<red handset>** key.

If the phone asks you for a PIN code, enter the code (it will be displayed as: \*\*\*\*) and press the **<green handset>** key.


## ***SIM card, memory card and battery inserting***

If the phone is turned on – switch it off. Take off the back cover – gently press and move the lid down to take it off.

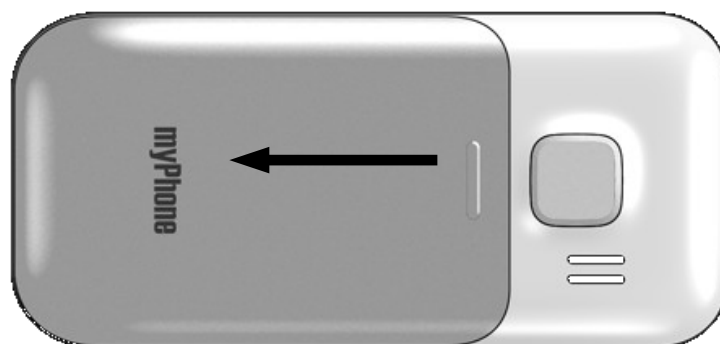


Insert the SIM card – SIM card should be placed with its gold contacts facing down in a way that the recess is stamped.


Insert the memory card – to open the card reader lid gently slide it down. MicroSD memory card must be placed with its gold contacts facing down, in a way that its recess is stamped. Close the memory card lid gently sliding it upwards.

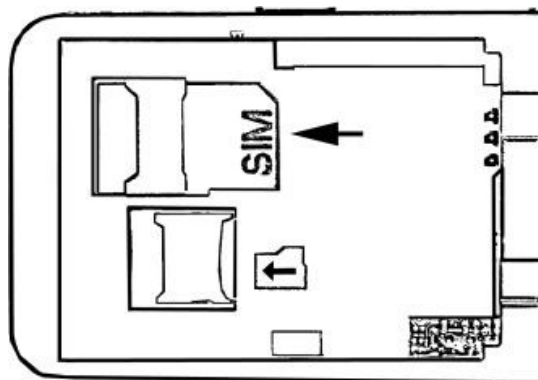

The battery should be inserted in such a way so that the gold connectors on the battery contact the gold contacts in battery recess in your mobile phone.

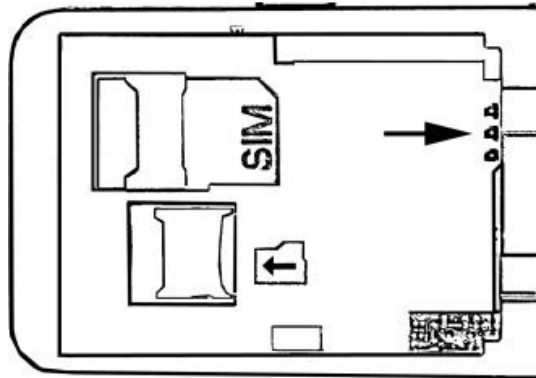

Put on the back cover.

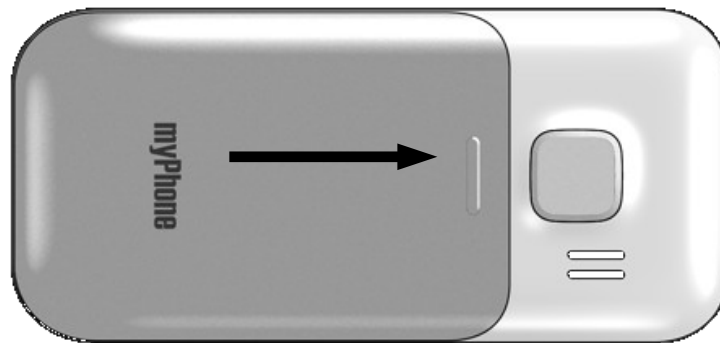


## ***Charging the phone***

*Charging without using the charging base.*

Connect the charger with your mobile

phone via a charging slot, Insert the charger plug into a wall socket.

**\*Attention:** Improper connection of the charger can cause serious damage to your phone. Damage caused by misuse is not covered by your warranty.

During or after charging an icon appears:  
 (or similar). Unplug the charger from the electrical outlet after charging.

Disconnect the charger cable from the charging slot in your mobile phone.


*Charging with the use of charging base.*

Connect one end of the charger with charging slot of the charging base, then

plug the charger into a wall outlet.

Insert the phone into your charging base.

**\*Attention:** Improper connection of the charger can cause serious damage to your phone. Damage caused by misuse is not covered by your warranty.

During or after charging an icon appears:  
 (or similar). Unplug the charger from the electrical outlet after charging.

Disconnect the charging base cable from wall socket.

### ***Low battery indicator information***

When the battery is discharged, you will see a low battery indicator on display.

The battery icon is empty. If the battery level is too low, the phone automatically turns off. To use the phone, re-charge the battery.

## 2. Using the basic features

### *Menu access*

To get the Menu access press the Navigation key **<up>** or **<down>**.

Using keys **<up>** and **<down>** select the appropriate option.

Press the **<green handset>** key, to confirm (enter the option) or the **<red handset>** key, to go back to the main screen (standby mode).

## ***Customize your phone***

myPhone 1045/1082 can be customized to your own needs. It will make using it much easier.

### *Enable or disable the silent mode*

To enable or disable the Silent Mode in standby Mode use the zero key **<0>**. Press and hold it for about 3 seconds until statement appears „silent mode activated”.

### *Sounds and user profiles*

To set the phone volume level go to **[Profiles]** option in phone`s Menu.

Press navigation key **<up>** or **<down>**, to enter phones Menu. Then, using keys **<up>** and **<down>**, select option



**[Profiles]** and press the **<green handset>** key.

Select the appropriate profile from the list, press the **<green handset>** key → **[Options]** → **[Activate]** → **<green handset>** key to confirm your choice.

→ **[Options]** → **[Customize]** → the **<green handset>**, to edit profile according to your own needs.

- **[Alert type]** – press the **<green handset>** → **[Options]** → **[Change]** → select the appropriate alert type.
- **[Ring type]** – press the **<green handset>** → **[Options]** → **[Change]** → select the appropriate ring type.
- **[Ringtone]** – you can change the ringtone for incoming calls – press the **<green handset>** → **[Options]**

→ **[Change]** → **[Select]**, select the ringtone **<green handset>** → **[OK]**.

- **[Ringtone volume]** - press the **<green handset>** → **[Options]** → **[Change]** press the volume control keys **<+>** and **<->** (on the left side of your phone), to set the volume level.
- **[Message]** – you can set an alert for incoming message – press the **<green handset>** → **[Options]** → **[Change]** → select sound and confirm by pressing the **<green handset>** key → **[OK]**.
- **[Message volume]** – enables you to set the volume of incoming message - press the **<green handset>** key → **[Options]** → **[Change]** and press the volume control keys **<+>** and **<->** (on the left side of your phone), to set the volume level.

- **[Keypad Tone]** - press the **<green handset>** key → **[Options]** → **[Change]** and select the type of keypad tone. Confirm by pressing **<green handset>** key → **[OK]**.
- **[Key tone volume]** – you can easily adjust the key tone volume level - press the **<green handset>** key → **[Options]** → **[Change]** and press the volume control keys **<+>** and **<->** (on the left side of your phone), to set the volume level.
- **[System alert]** – press the **<green handset>** key → **[Options]** → **[Change]** and turn the system alert on or off. Confirm by pressing the **<green handset>** key → **[OK]**.

## *SOS key settings*

**myPhone 1045/1082** is equipped with SOS key. It is located on the back of the phone, over the battery cover:



To enable the SOS key, select in main **[Menu]** (navigation keys **<up>** or **<down>**) → **[SOS Setting]**. A submenu appears with SOS key settings:

- **[SOS number setting]** - it is possible to enter 5 numbers the phone will try to connect with after longer pressing the SOS key.
- To enter a number press the **<green handset>** key → **[Options]** → **[Edit]**

and enter the phone number.

After entering the last number, select: **[Options]** → **[Done]**. To confirm all of the numbers select: **[Options]** → **[Save]** → **[Done]**. If there is no number saved in option **[SOS number setting]** long pressing of the SOS key activates the alarm sound for 5 seconds.


- **[Love number setting]** - It is an option allowing you to assign speed dial numbers to keys: **<\*>** and **<#>**. The numbers can be assigned to different tabs „Male” and „Female”. To enter the number press the **<green handset>** key → **[Options]** → **[Edit]** and enter the phone number. After entering the number, select: **[Options]** → **[Done]**.

When you finish entering all Love numbers: **[Options]** → **[Save]** →

## **[Done].**

- **[SOS SMS content]** - a SMS that will be sent to numbers entered in **[SOS number]**. It is possible to enter your own text and save changes (**[Options]** → **[Edit]** → enter the SOS message content → **[Options]** → **[Done]**).
- **[Select the object of SMS]** - The last option in SOS submenu is selecting phone numbers the alarm SMS will be sent to. It is possible to select all five receivers (all five entered SOS numbers) or, for example, only one of them.
- **[Call waiting time]** – time after which the alarm sound stops, and the phone will attempt to call all sequential numbers set in the **[SOS number setting]**.

## ***Phone lock***

Use the key  (located on the right side of

your phone) to lock or unlock the phone.

Move the slider up to lock the phone or move it down to unlock it.

## ***Connectivity options***

### ***Making a phone call***

In standby mode enter a phone number using alphanumeric keypad. It is recommended to enter the code number and then the phone number.

Press the **<red handset>** key, to terminate the phone call.

## *Answering the phone*

When there is an incoming call, press the **<green handset>** key → **[Answer]** in order to answer the phone.

Press the **<red handset>** key, to reject/terminate a phone call.

## *Text messages*

### *Sending SMS message*

Select: **[Menu]** → **[Messaging]** → **[Write message]**.

Enter the text using the alphanumeric keypad. The characters are entered letter by letter as the phone is not equipped



with a dictionary.

The key <#> is used to select between different writing modes. There are the following modes available:

- ABC – only upper case letters
- abc – only lower case letters
- 123 – only digits.

In order to enter a special character, for example: a dot, a comma or a hyphen etc., press the key <\*> and select a symbol from the list or press the key <1> as many times as needed.

To make a space between two words press the key <0>.

*An example of entering characters:*

*To enter letter „b”, press the „2” key*

*twice. To enter letter „d”, press the „3” key once, etc.*

After entering the text of a message, press the **<green handset>** key → **[Options]** → **[Send to]**.

A list of options appears:

- **[Enter number]** – enter number by using the numeric keypad **<green handset>** key → **[Send]**,
- **[Add from Phonebook]** – when you select this option, simply enter the first few letters of the contact name to search for it in the phone book. Select **[OK]**, to confirm your choice. After entering the number / selecting a contact from phone book, select: **[Options]** → **[Send]**, to send a message.

## *Message displaying*

Select: **[Menu]** → **[Messaging]** → **[Inbox]**, select a message from the list and press the **<green handset>** key → **[View]**, to read the message.

## *Phonebook in myPhone 1045/1082*

### *Add new contact*

To add new contact select: **[Menu]** → **[Phonebook]** → **<UP>**key → **[Add a new contact]** → **<OK>** key

Select a place for saving a contact (SIM or Phone). Then insert a contacts name **[Options]** → **[Edit]**) and phone number.

Press the **<green handset>** key → **[Options]** → **[Save]** to save a contact.

To move contacts between SIM card and Phone memory select: **[Menu]** → **[Phonebook]** → **[OK]** → **[Add new contact]** → **[Phonebook settings]** **[Move contacts]**.

### *Search for contact*

To search for contact, select: **[Menu]** → **[Phonebook]**.

Enter first letter of contact`s name.

Contacts that start with this letter appear on the list. To search through these contacts simply use the navigation keys **<up>** and **<down>**.

After finding the desired contact and pressing the **<green handset>** key → **[Options]** it is possible to:

- **[view]** – see contacts details (name and number).
- **[Send text message]** – send SMS.
- **[Edit]** – edit contacts details.
- **[Delete]** – delete contact.
- **[Copy]** – copy contact from SIM card to Phone and conversely.
- **[Phone book settings]** – enter additional options such as speed dial, memory status etc.

### *Delete contacts*

To delete all contacts, select: **[Menu]** →  
**[Phonebook]** → **[Add new contact]** →  
**[Options]** → **[Phonebook settings]** →  
**[Delete all contacts]**

To delete single contact, select: **[Menu]** → **[Phonebook]** → search for contact you want to delete **<green handset>** → **[Options]** → **[Delete]**.

### 3. Using advanced features

#### Call a contact from Phonebook

To establish connection with contact saved in **[Phonebook]** submenu perform the following steps:

In standby mode press the navigation key **<up>**.

Enter **[Phonebook]** submenu, and confirm **[OK]** by pressing **<green handset>** key.

Search for contact on the list (by entering the name and contacts number), and establish a phone call by pressing

**<green handset>** key and select **[Call]**.

## ***Missed calls***

All missed calls are shown on phone's display.

A message about a missed call and an icon:



, appears on display.

To check who called or to make a connection with missed number, do as follows:

Press **[View]** (with the **<green handset>** key).

The other way is a **[Call centre]**. Select **[Menu]** → **[Call centre]** → **[Call history]** → **[Missed calls]**.

To call a missed number press the **<green handset>** key → **[Call]**.

## ***Loudspeaker***

During an active phone call press **[Options]** and select **[H-Free/H-Held]** from the list to activate Loudspeaker mode.

## ***Speed dial***

Select option **[Phonebook]** → **[Add new contact]** → **[Phonebook settings]** → **[Speed dial]**.

The following list appears: **[Status]** and **[Set number]**. Using the green handset key set the **[Status]** to: **On**.



Select option [**Set number**]. On the left side of display there are numbers that correspond with keypad. With the use of option: [**Options**] → [**Edit**] → **select from Phonebook** it is possible to assign a contact to a certain key [**Speed dial key**]. After setting numbers select [**Back**], to go back to phone`s Menu.

To establish a connection press and hold (for about 3 seconds) the key on numeric keypad with assigned number.

## ***International calls***

In standby mode press the key <\*> twice until a sign „+” appears.

Enter a full number (country code, city code and contact number) and press the <**green handset**> key, to make a phone

call.

## 4. Other features

### *Date and time setting*

To set date and time select the following option:

**[Menu] → [Settings] → [Phone settings] → [Time and date].**

Select **[Set time/date]**, confirm **[OK]** by pressing **<green handset>**.

Enter current date and confirm it **[OK]** by pressing **<green handset>** key.

Using the navigation key **<down>**, enter current date. Confirm by pressing **<green handset>** key.

In **[Set format]** option select the type of date and time you want to perform on

display.

## ***Language settings***

To set or change the language select the following option: **[Menu]** → **[Settings]** → **[Phone settings]** → **[Language]**.

Select language from the list.

## ***Display settings***

**[Menu]** → **[Settings]** → **[Phone settings]** → **[Display]**:

- **[Wallpaper]** → select **[System]** (if you want to define system wallpaper) or **[User defined]** (if you want to add your own wallpaper), then select one of wallpapers available on the list. To

preview chosen wallpaper select  
**[View]**. To set the wallpaper select:  
**[OK]**.

- **[Power on display]** → select **[System]** (if you want to browse system images) or **[User defined]** (if you want to add you own animation), select animation from the list. To preview your choice, select **[View]**. To set the animation press: **[View]** → **[OK]**.
- **[Power off display]** – proceed similarly to the above-described power on display.
- **[Show date and time]** – disable / enable the date and time located on the main screen.

## ***Call settings***

Call settings are available in **[Menu]** → **[Call centre]** → **[Call settings]**. The following settings are available: Blacklist, Auto redial, Call time reminder, Reject by SMS and Answer mode.

## ***Alarm configuration***

In main **[Menu]** select **[Organizer]**.

Go to option **[Alarm]** by pressing **[OK]**.

Select any item from the list and press **[Edit]**.

Enter **[Status]** to enable or disable alarm.

Press navigation key **<down>**. It is possible to set the time of the alarm using

the numeric keypad.

After pressing **<down>** key again you may choose when you want the alarm to go off (once, every day, custom, etc.). It also possible to set the alarm tone and alert type.

To confirm settings, select: **[Save]** → **[OK]**).

## ***Calculator***

In **[Menu]** mode select: **[Organizer]**.

Select **[Calculator]** from the list using the **<green handset>** key.

Basic arithmetic operations can be performed using the alphanumeric keyboard (typing numbers, digits).

Actions operator can be set by using navigation key (<**up**>, <**down**>).

Press the <**green handset**> key to see the result.

## ***Factory settings***

To restore factory settings, select in Menu mode: **[Settings]** → **[Restore settings]**.

Restoring code is: **1122**

## ***Flashlight***

To activate the flashlight, slide up side zipper . Slide it down to deactivate it.



## ***Call history***

There is an option **[Call history]** in your phone. You can find it in **[Menu] → [Call centre] → [Call history]**. It is possible to browse your calls register – missed calls, dialled calls, received calls etc. There are the following options available in submenu:

- Missed calls
- Dialled calls
- Received calls
- All calls
- Delete call logs



## **Tasks**

There is a Tasks option available in your phone. It is possible to add your own note and save it in phones memory.

To add a new task, select: **[Menu]** → **[Organizer]** → **[Tasks]** → **[Add]**.

You can enter text, select: **<Subject>**, press key No.5 and enter the text you want to remember. Note length is a maximum 35 characters. You can also set the date and time (**[Due time]**).

Another option is **[Alarm]**. You may enable or disable it.

To save the task, select with the **<green handset>** key: **[Options]** → **[Save]**.

The alarm will start at the certain date and time and remind us about the task.

## ***Audio player***

In [**Multimedia**] option there is an Audio player. It makes it possible to play MP3 files saved on the memory card. Audio files should be saved on microSD memory card in **My Music** folder – they will automatically be added to a playlist in audio player.

You can operate the player using the following buttons:

Button	Function
+	Volume up
-	Volume down
<4>	Previous
<5>	Play/ pause



When you turn on the audio player, there are the following options available in the lower left corner of the display:

- Playlist – list of all recordings
- Settings – audio player settings available in: **[List]** → **[Options]** → **[Settings]**:
  - Playlist auto generating – set to „Enable”
  - Repeat – repeat recordings
  - Shuffle – enable or disable random playing
  - Background playing – play in background.

## ***FM radio in myPhone 1045/1082***

Activating FM radio requires plugging in the earphones. It really improves the quality of listening to a radio broadcast. Headphones plugged in act as an external antenna.

In Menu mode select option: **[Multimedia]** → **[Radio FM]**, or simply slide up the side FM slider.

Select: **[Options]** → **[Auto search]** → **[Select]** to search for available radio stations.

All available channels will be saved in **[Channel list]** folder.

Radio volume control is done by using the **<+>** and **<->** keys located on the left

side of the phone cover.

Radio control is made by using the following keys:

Key	Function
<b>&lt;down&gt;</b>	Changing the frequency of 0.1 MHz down.
<b>&lt;up&gt;</b>	Changing the frequency of 0.1 MHz up.
Side slider – FM	Enable the radio (slide the slider up) Disable the radio (slide the slider down)

To turn off the radio, move the side FM slider down.

## ***Calendar***

There is a calendar available in myPhone 1045/1082. You can view the current date or check different dates and days.

To enter the calendar, select: **[Menu]** → **[Organizer]** → **[Calendar]**.

## ***Bluetooth***

In myPhone 1045/1082 Bluetooth module is available. It is used to connect wirelessly with devices equipped with Bluetooth function.

To enter Bluetooth module, select:

**[Menu]** → **[Settings]** → **[Connectivity]** → **[Bluetooth]**. The following options available:

- **[Power]** – The **<green handset>** key enables or disables Bluetooth radio broadcasting. A blue icon with letter “B” on the main screen indicates that Bluetooth module is on.
- **[Visibility]** – enabling this feature allows other devices with Bluetooth technology to see us on the list of available devices.
- **[My device]** – you can find **[Search new device]** option here. It allows us to display a list of available Bluetooth devices within range. It is possible to connect to devices available on the list.

- **[My name]** – allows you to enter the name under which the device will appear when you connect to other Bluetooth devices. The default name is **myPhone 1045/1082**.

### *Pairing Bluetooth devices.*






To connect with other Bluetooth device, select it from the list of available devices (**[Menu]** → **[Settings]** → **[Connectivity]** → **[Bluetooth]** → **[My device]** → **[Search new device]**) select device you want to connect with and press **[Pair]**. Statement asking if **Passcode matched?** appears on both devices. Press **[Yes]**. Devices are connected.





## *Sending files via Bluetooth.*

To send file to device that we are connected with (paired), enter: **[Menu]** → **[File manager]** → **[Options]** → **[Open]** select from memory card file you want to send, mark it and select **[Options]** → **[Send]** → **[via Bluetooth]**. When receiver accepts the file – it will be sent.

## *Icons in your mobile phone*

	The level of GSM network
	Battery level
	“Meeting” mode is enabled
	“General” mode is enabled
	Alarm

	Missed call
	Missed SMS

## ***Troubleshooting***

<b>Alert</b>	<b>Sample solution</b>
Insert SIM card	Make sure that your SIM card has been properly installed.
Enter your PIN	If your SIM card is secured by a PIN code, enter a PIN after turning on the phone and confirm it by pressing <b>&lt;OK&gt;</b> key.
Network	In areas where there is a

error	weak signal or reception, making and receiving calls may be impossible. Move to another location and try again.
-------	---

It is impossible to establish a connection

- *If the number was correctly entered, make sure that the green handset key has been pressed;*

Nobody can get through to myPhone 1045/1082.

- *The phone must be switched off;*

You cannot hear the caller / caller cannot hear myPhone 1045/1082 holder.

- *Microphone should be placed very close to your mouth;*
- *If you use the headset check if it has been properly connected;*
- *Check if the build in microphone has not been covered;*

Poor sound quality during a phone call

- *Make sure if the speaker and the microphone have not been covered;*

It is impossible to make a phone call

- *Check if number entered with the use of numeric keypad is correct;*
- *Check if number saved in **[Phone book]** is correct;*

- *If it is necessary, enter the correct number.*

How to check the software version?

*There are two codes to check the software version. The type of code depends on the version of the phone.*

*The codes are as follows:*

- *\*#868602# and select option **[Version]***
- *\*#8008#*

## **5. Care and maintenance**

**Comments on the proper use of battery**

The battery in this phone may be powered via a charger. If the battery level is low, charge it. To extend battery life, let it be up to land before connecting to the charger.

If you are not using a charger, disconnect it from the phone. Overcharging will shorten battery life.

Battery temperature affects the quality of its load. Before you start charging, the battery can be cooled or heated so that its temperature is similar to the standard conditions of peace. If the battery temperature exceeds 40 degrees, the battery cannot be charged!

Use the battery only for its intended purpose. Avoid leaving the battery in a magnetic field, because it shortens its lifetime.

Do not use the battery if it is damaged.

Battery life may be shortened if it is exposed to very low or very high temperatures, this causes interference to the phone, even if the battery is charged properly.

Do not dispose of batteries in a fire! Do not throw away used batteries - please send it or take it to an authorized place of recycling.

### ***Phone maintenance***

To extend the life of your phone, follow the guidelines:

Keep the phone and its accessories out of reach of children;



Avoid contact with liquids, it may cause corrosion of metal parts;

Do not attempt to disassemble the device. Unprofessional interference in the structure of the phone can severely damage or destroy it;

Do not use a high concentration of acidic or alkaline for cleaning the phone;

Use only original accessories; violation of this rule may invalidate the warranty.

Exposing your phone to extreme temperatures can reduce the level of protection. It is recommended that the phone is not used at temperatures less than 0 ° C / 32 ° F or higher, such as 40 ° C / 100 ° F.

## ***Safety information***

Please take into account the regulations

for your and the environment safety,  
while using the phone.

## ***Safety while driving a car***

Apart from the emergency situations, the use of the phone while driving should be through a wireless headset that will ensure the security and will not limit user's movement. If you do not have a headset, and you want to use the phone, exit onto the side of the road and stop the car. Please note the legal regulations concerning the use of a mobile phone while driving. Certain electronic elements of the car, without adequate protection, may be affected by waves emitted by the phone, it is advisable to use the phone in the car only when an external antenna of the vehicle is secured. Use the services of an expert to install the phone in the car.

## ***Environment safety***

Read the regulations on the use of mobile phones. Turn off the phone in places where its use is prohibited or where it may cause disruption and danger. The use of any devices that use radio waves cause interference to medical devices (e.g. stethoscope, or pacemaker), if they are not properly secured (if in doubt, consult your physician or medical device producer).

### **\*Attention:**

In potentially explosive environments (such as petrol stations, chemical plants, etc.) it is recommended to switch the phone off. Check out the regulations governing the use of GSM equipment at these sites.

## ***Technological criteria***

Network: GSM 900/1800

Some services may depend on your network provider, the state of the local wireless network, version of the SIM card used in phone and the way you use the phone. For more information, contact your service provider.

<b>Attention</b>	<b>Statement</b>
The manufacturer is not responsible for the consequences of the situation caused by improper use or non-compliance to the above recommendations.	Version of the phone can be upgraded without notice. Representative reserves the right to decide on the proper interpretation of the above instructions.

## ***SAR Certification information***

his phone meets European Union (EU) requirements concerning exposure to radio waves. Your mobile phone is a radio transmitter and receiver. It is designed and manufactured to not exceed the limits for exposure to radio-frequency (RF) energy, as recommended by the EU Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organizations through the periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as

## Specific Absorption Rate (SAR).


SAR limit recommended by the Council of the European Union amounts to 2.000 W/kg and concerns value averaged over 10 grams of tissue.

The highest SAR value for **myPhone 1045/1082** is **0,421 W/kg**.

### ***Proper disposal of used electrical and electronic equipment***



The device is marked with the

 symbol of crossed-bin, in accordance with European Directive 2002/96/EC on waste electrical and electronic equipment

(Waste Electrical and Electronic Equipment - WEEE). Products marked with this symbol after a period of use should not be utilized or disposed of with household waste. You must dispose of electrical and electronic equipment, providing these to the designated point at which such hazardous wastes are subjected to a process of recycling. Collecting this type of waste in enclosed places and the correct process of recovery help to protect natural resources. Proper recycling of waste electrical and electronic equipment has a positive impact on human health and the environment.

In order to obtain information about where and how to safely dispose of electrical and electronic equipment waste, users should contact the appropriate authority of the local



authorities, waste collection point or point of sale where the equipment has been purchased.

**CE 2200**

**myPhone Sp. z o.o.** declares that this product complies with the essential requirements and other relevant provisions of European Directive 1999/5/EC.

Numer Deklaracji 60/10/2012  
*Number of Declaration of Conformity*

Data wystawienia deklaracji 26.10.2012  
*(date of issue of declaration)*

**DEKLARACJA ZGODNOŚCI WE**  
*EC DECLARATION OF CONFORMITY*

**My/We, myPhone Sp. z o. o.**  
*(nazwa importera / importer's name)*

**ul. Fabryczna 2, 56-400 Oleśnica**  
*(adres importera / importer's address)*

niniejszym deklarujemy, że następujący wyrób:  
*declare under our responsibility, that the electrical product:*

**telefon komórkowy / GSM mobile phone**  
*(nazwa wyrobu / name)*

**myPhone 1045**  
*(typ wyrobu / type of model)*

spełnia wymagania następujących norm:  
*to which this declaration relates is in conformity with the following standards:*

**EN 60950-1:2001+AI1:2004**  
**EN 301489-1 vl.6.1:2005-09**  
**EN 301 489-7 vl.3.1:2005-II**  
**EN 301489-17 vl.3.2 2008-04**  
**EN 301511 v9.0.2:2003-03**  
**EN 300 328 vl.7.1:2006-10**  
**EN 50360:2001**  
**EN 50361:2001**

jest zgodny z postanowieniami następujących dyrektyw:  
*following the provisions following directives:*

**Dyrektywa R&TTE 1999/5/EC**

Rok, w którym umieszczono oznaczenie CE na produkcie: 2012

26.10.2012 Oleśnica  
*(data i miejscowość / date, place)*

Olga Olkowska  
*Olga Olkowska*  
*(podpis sygnatariusza)*  
*(signature of the signatory)*

**myPhone** sp. z o.o.  
ul. Fabryczna 2 56-400 Oleśnica  
NIP: 895-18-45-043 + REGON: 020167256