

MOBILE MINI SPEAKER USER MANUAL

MODEL 161107

Thank you for purchasing this MANHATTAN® Mobile Mini Speaker, Model 161107.

Delivering full-range sound from iPods, iPhones, MP3 and portable CD/DVD players, notebook computers, hand-held games and other mobile media devices, its unique, retractable resonator easily extends to further deepen and expand bass response and improve audio performance.

See the back of this sheet for Instructions.



MANHATTAN™

BRINGING COMPUTERS TO LIFE

MANHATTAN® offers a complete line of PC Components, Peripherals, Cables and Accessories. Ask your local computer dealer for more information or visit us online at www.manhattan-products.com

Copyright © MANHATTAN

All products mentioned are trademarks or registered trademarks of their respective owners.



MH-161107-miniQIG-1109-01



- Built-in rechargeable battery provides hours of use
- Windows and Mac compatible – no drivers or power supply required
- Lifetime Warranty



NOTE: audio source not included

SPECIFICATIONS

GENERAL

- Frequency response (amplifier): 100 Hz – 18 KHz
- Speaker frequency response: 300 Hz – 18 KHz
- Signal to noise ratio (SN): >83dB
- Diameter, driver: 5.2 cm (2 in.)

CONNECTIONS

- Power output: 2.4 W
- USB mini B-type (for audio and charging)

SPEAKER FREQUENCY RESPONSE

- 3.5 mm stereo / USB type-A male to USB mini B male
- Length: 81 cm (32 in.)

SIGNAL TO NOISE RATIO

- Length: 81 cm (32 in.)

DIAMETER, DRIVER

POWER

- Battery: lithium, 300 mAh
- Working time: 7-8 hrs.
- Full recharge time: up to 4 hrs.

LED INDICATOR

- LED indicator (green/charging, red/charged)
- On/off switch

PACKAGING CONTENTS

- Dimensions: open, 52 x 65 mm (2 x 2.5 in.); closed, 52 x 35 mm (2 x 1.4 in.)
- Weight: 51 g (1.8 oz.)

TRAVEL BAG, CABLE

- Mobile Mini Speaker
- Travel bag, cable, user manual

INSTRUCTIONS

Charging the Battery

Before you use the Mobile Mini Speaker, its built-in battery needs to be fully charged.

- Plug the USB type-A connector on the included cable into a USB port on a powered computer, then plug the USB mini B male connector into the speaker's USB charger port.
- The LED indicator on the bottom of the

speaker lights green when the battery is charging or powering the speaker during operation. The LED turns red when the battery's fully charged.

- It takes 3-4 hours to fully charge the battery.
- You can expect 7-8 hours of playing time (depending on the volume level) before recharging is necessary.



Setting Up & Using the Speaker

IMPORTANT: Once the speaker's built-in battery is fully charged, unplug the USB type-A connector from your computer before you connect the speaker to any audio source.

1. With the USB mini B male connector on the included cable plugged into the speaker's USB charger port, connect the 3.5 mm stereo/audio plug into your audio source.
2. Set the power switch on both the speaker and the audio source to On.
3. To use the resonator and enjoy a fuller bass sound, hold both halves so the top/speaker

is to the right (the bottom with the 3 small "feet" is to the left), then rotate the right side counterclockwise (toward yourself) and carefully expand the diaphragm. After use, gently compress the diaphragm and turn in the opposite direction to lock the resonator in place.

CAUTION:

- Keep the device away from water, prolonged direct sunlight and excessive heat/humidity.
- Do not disassemble the device or insert anything inside of it.