

User Manual  
myPhone Halo 2



Thank you for choosing **myPhone Halo 2**.

Please read the Manual carefully.

**myPhone Halo 2** is designed for use in GSM 900/1800 MHz and 850/1900 MHz making it versatile almost all over the world.

Big buttons with clear descriptions, contrast full colour display, flashlight and Bluetooth – all these mark myPhone Halo 2.

This manual covers different colour versions of the device.

PL

## **SAFETY**

Read these simple guidelines. Not following them may be dangerous or illegal.

### **DO NOT RISK**

Do not switch on the phone when the use of mobile phones is prohibited or if it might cause interference or danger.

### **ROAD SAFETY**

Do not use the mobile phone while driving a car.

### **INTERFERENCE**

All wireless devices may be susceptible to interference, which could affect performance.

### **RESTRICTED AREAS**

Follow any restrictions. Switch the device off in aircraft, near medical equipment, fuel, chemicals or blasting areas.

### **QUALIFIED SERVICE**

Only qualified personnel may install or repair this product. Repairing by an unauthorized service may cause a phone damage and warranty loss.

### **BATTERY AND ACCESSORIES**

Avoid exposing the battery to very high/low temperatures (below 0°C/32°F and over 40°C/104°F). Extreme temperatures may

influence capacity and battery life. Avoid contact with liquids and metal objects as it may cause partial or complete battery damage. The battery should be used according to its purpose. Disconnect unused charger from mains supply. Excessive charging the battery can cause damage. Therefore, a single battery charge should not last longer than three days. When unused - disconnect the charger from power supply. In case of a damage the charger should not be repaired but replaced with a new one. Use only original myPhone accessories available with your phone. Installing an incorrect battery type can cause explosion. Please dispose of battery according to the instructions.

### **WATERPROOF**

myPhone Halo 2 is not waterproof. Protect it from moisture.

### **ALARM CALLS**

Making alarm calls may not be possible in some areas or circumstances. It is recommended to find an alternative way to notify emergency services if you are going to undeveloped or remote areas.

### **CHILDREN**

The phone is not a toy. Keep the device and its accessories out of reach of children.

### **USING THE MANUAL**

Before you use the device refer to information about safety precautions and instructions for using the phone. The descriptions in this manual are based on the default settings of the phone. The latest version of the user manual can be found on website:  
[www.myphone.pl](http://www.myphone.pl).

Depending on the installed version of the software, service providers, SIM card or country, some of the descriptions in this manual may not match your phone.

## **LONG PHONE CALLS**

This device generates magnetic field, which (as in case of any phone) can cause headaches. For more information, see "on SAR certification information" of this manual.

## **PETROL STATION SAFETY**

Always turn off the phone while refuelling your car on petrol station. Do not use your phone close to chemicals.

## **SOUNDS**

To avoid your hearing damage, do not use the device at high volume levels for a long period of time, do not put enabled device directly to the ear.



**Manufactured by:**

**myPhone Sp. z o.o.**

**ul. Nowogrodzka 31**

**00-511 Warszawa**

**Polska**

**Customer service:**

**myPhone Sp. z o.o.**

**ul. Krakowska 119**

**50-428 Wrocław**

**Polska**

**phone: (+48 71) 71 77 400**

**E-mail: pomoc@myphone.pl**

**website: <http://www.myphone.pl>**

## Contents

Contents.....	7
myPhone Halo2 contents.....	9
Technical parameters.....	9
Additional technical information .....	<b>Błąd! Nie zdefiniowano zakładki.</b> 0
1. Phone layout - introduction.....	111
Phone layout – keys and functions ..	<b>Błąd! Nie zdefiniowano zakładki.</b> 1
Turning on/off the phone .....	13
Sim card, memory card and battery inserting .....	13
Battery charging.....	<b>Błąd! Nie zdefiniowano zakładki.</b>
Charging without charging base .....	14
Charging with the use of charging base	<b>Błąd! Nie zdefiniowano zakładki.</b>
Low battery indicator information .	<b>Błąd! Nie zdefiniowano zakładki.</b>
2. Using basic features .....	16
Operating shortcuts available from the desktop .....	16
Menu access.....	16
Customizing your phone.....	17
Enable/disable the “Silent” mode. ....	17
Sounds and User profiles .....	17
Alarm key (SOS) settings .....	19
Phone lock.....	20
Connectivity functions.....	20
Making a phonecall.....	20
Answering a phonecall.....	20
Text messages.....	21
Sending messages.....	21
Message displaying.....	22
Phonebook in myPhone Halo 2 .....	22
Add new contact.....	22
Search for contact.....	23
Delete contacts .....	23
3. Advanced features.....	24
Call a contact from Phonebook .....	24
Missed calls.....	24
Loudspeaker.....	24

International calls.....	24
4. Other features .....	25
Date and time setting .....	25
Language setting .....	<b>Błąd! Nie zdefiniowano zakładki.</b>
Display settings.....	26
Call settings.....	26
Alarm(s) configuration .....	27
Calculator.....	28
Factory settings .....	29
Flashlight .....	29
Camera .....	28
Call history.....	29
Audio player .....	30
FM radio in myPhone Halo 2. ....	31
Calendar .....	32
Bluetooth.....	33
Pairing Bluetooth devices. ....	34
Sending files via Bluetooth. ....	34
Icons in myPhone Halo2.....	34
Troubleshooting.....	35
5. Care and maintenance .....	37
Proper battery use.....	37
Phone maintenance .....	38
Safety information .....	39
Safety while driving .....	39
Environment safety .....	39
Technological criteria .....	40
SAR certification information .....	40
Proper disposal of used electric and electronic equipment .....	41
Proper disposal of used battery.....	42
Declaration of conformity with EU directives .....	42



## **myPhone Halo 2 contents**

Before you start using your phone, make sure all of the following items are included in the box:

- myPhone Halo 2,
- battery,
- mains charger,
- charging base,
- USB cable,
- user manual,
- warranty card.


If any of the above items is missing or damaged, please contact your dealer.

There is a sticker containing the IMEI and serial number on the packaging of myPhone Halo 2 set.

Therefore it is recommended to keep the packaging in case of any complaint. Keep the container out of reach of children.

## **Technical parameters:**

- **Four frequency ranges:** 850 / 1900 and 900 / 1800 MHz;
- One SIM card slot;
- **Dimensions:** 121 x 58 x 14 mm
- **Display:** 2.2”

- **Loudspeaker mode**
- **Battery capacity:** 700 mAh
- **Weight:** 85 g
- **Memory card support:** up to 32 GB
- **Charger technical specifications:**
  - **Input:** 100-240 V~, 50/60 Hz, 150 mA
  - **Output:** 5.0 V , 500 mA.

### **Additional technical information**

 
It is possible to save up to 100 contacts in Phonebook, and the internal memory allows you to store up to 50 text messages.

It is recommended to install SD card to be able to use the camera and enter your own ringtones.

It is possible to buy a headset with micro USB end for better FM radio signal reception. The micro USB end can't be shorter than 7mm.

# 1. Phone layout - Introduction

## Phone layout – keys and functions

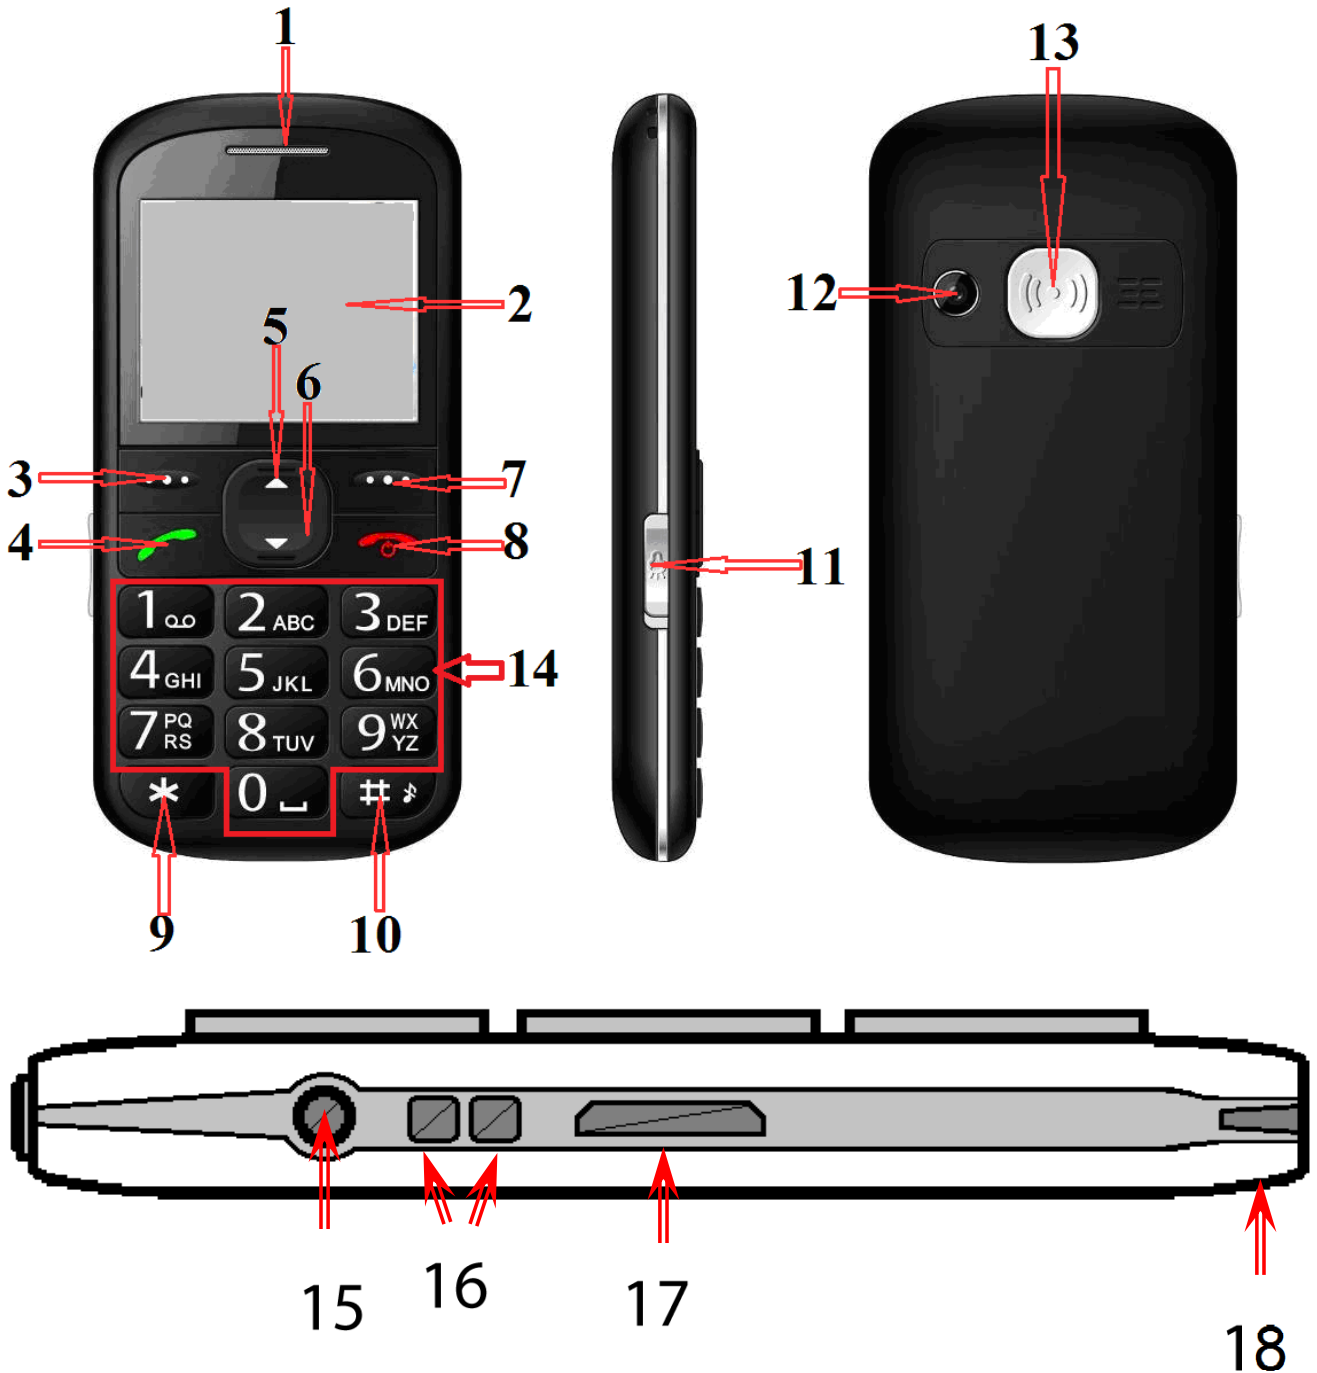

PL

1. Earphone

2. Display

3. Upper left soft key

- Mostly used to open options submenu, or to accept your choices.

4. Green handset key

- Used for answering and making phone calls.

5. Navigation key UP

6. Navigation key DOWN

7. Upper right soft key

- Mostly used as a „back” key

8. Red handset key.

- Reject a phone call / quick return to the main menu. Turns the phone on/off when held.

9. Key (\*).

- Used to lock the keypad, or change the program options (sliders, text options, etc.)

10. Key (#).

- Hold it down to enable silent mode. It also used to change the program options (sliders, etc.)

11. Flashlight slider (on / off).

12. Camera lens.

PL

13. Alarm key – SOS.
14. Numeric keypad.
15. Flashlight.
16. Base charging contacts.
17. micro USB slot.
  - It can be used to connect to computer or to charge the phone.
18. Groove used to remove the back cover.

### **Turning on/off the phone**

**\*Attention:** Do not switch the phone in places where using mobile phones is forbidden or where it may cause interference or danger.

To turn the phone on/off press and hold the **<red handset> (8)** key.

 
If the phone asks you for a PIN code, enter the code (it will be displayed as: \*\*\*\*) and press the **upper left soft key (3)**. It is located above the green handset key.

### **SIM card, memory card and battery inserting**

If the phone is turned on – switch it off. Remove the back cover – pry it with the groove in housing **(18)**

Insert the SIM card – SIM card should be placed with its gold contacts facing down in a way that the recess is stamped.

Insert the memory card – to open the card reader lid gently slide it down. MicroSD memory card must be placed with its gold contacts facing down, in a way that its recess is stamped (see picture below).

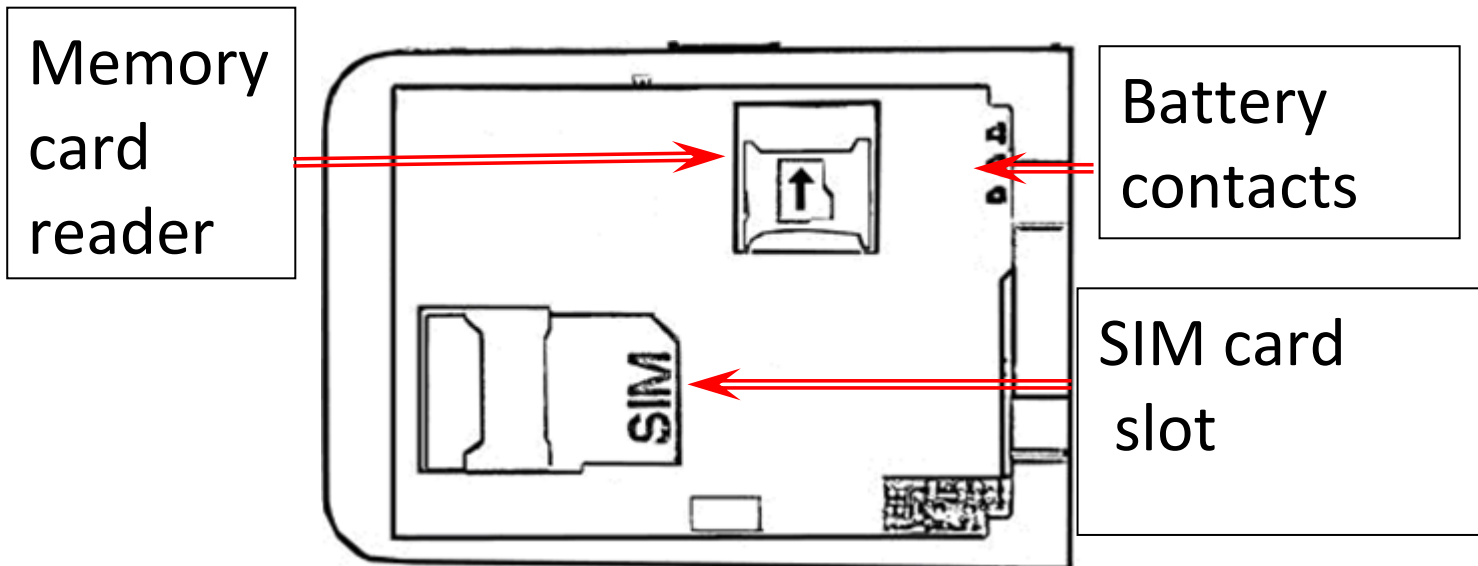

Insert the battery – it should be inserted in such a way so that the gold connectors on the battery contact the gold contacts in battery recess in your mobile phone.

Put on the back cover (pressing it until the “click” sound can be heard). Make sure that the lid is tightly closed.


### **Battery charging**

#### **Charging without charging base**

Attach micro USB cable to micro USB slot in your phone and connect charger with mains.

**\*Attention:** Improper connection of the charger can cause serious damage to your phone. Damage caused by misuse is not covered by your warranty.



During charging an icon  appears in the upper right corner of the display. Disconnect the charger cable from charging slot in your phone and from electric socket.

### Charging with the use of charging base

Plug the charger's micro USB cable into the charging base, then plug the charger into a wall outlet. Place the phone in the charging base as on the picture below:



**\*Attention:** Improper connection of the charger can cause serious damage to your phone. Damage caused by misuse is not covered by your warranty.

PL

During charging an icon  appears in the upper right corner of the display. Disconnect the charger cable from charging slot in your phone and from electric socket.

### **Low battery indicator information**

When the battery is discharged, you will see a low battery indicator on display. The battery icon is empty. If the battery level is too low, the phone automatically turns off. To use the phone, re-charge the battery.

## **2. Using basic features**

### **Operating shortcuts available from desktop**

Pressing **navigation key „down”** on the desktop or wallpaper screen enters Photo contacts.

Pressing **navigation key „up”** enters multimedia menu.

### **Menu access**

To enter main Menu press **upper left soft key (3)**.

Using **navigation keys “up” and “down”** enter desired option in main Menu.

Press **upper left soft key**, to confirm or **upper right soft key** to go back to previous screen or standby mode.



Change the value of options using buttons \* (left) and # (right).

## **Customizing your phone**

myPhone Halo 2 can be customized to your own needs. It will make using the phone much easier.

### *Enable/ disable „silent” mode*

Use <#> key to disable all sounds in standby mode. Press and hold it for about a second until statement „Silent mode activated” appears on display. By pressing and holding <#> once again you will go back from silent mode to general mode (profile with all sounds on).

## **Sounds and User profiles**

To set a sound profile enter **[Menu]** → **[Settings]** → **[Profiles]**. Press upper left soft key **(3)** to enter Menu, then using “up” and “down” keys select Settings and enter Profiles with upper left soft key again.

Select one of the profiles from the list and press **upper left soft key** → **[Options]** → **[Activate]**, to set the profile, or **upper left soft key** → **[Options]** → **[Customize]**, to edit a profile according to your own preferences.

- **[Alert type]** – press **[upper left soft key]** → **[Options]** → **[Change]** → and select the alert type. Press **[upper left soft key]** again → **[Options]** → **[Save]** to save the settings.
- **[Ring type]** – press **[upper left soft key]** → **[Options]** → **[Change]** → and select the alert type. Press **[upper left soft key]** again → **[Options]** → **[Save]** to save the settings.
- **[Ringtone]** – it is possible to change a ringtone for incoming calls

PL

- press **[upper left soft key]** → **[Options]** → **[Change]** → select a sound and confirm by pressing **upper left soft key**. Press **upper left soft key** once again → **[Options]** → **[Save]**, to save your settings.
- **[Ringtone volume]** - press **upper left soft key** → **[Options]** → **[Change]** and set volume level by pressing „up” and “down” keys. Press **upper left soft key** again → **[Options]** → **[Save]** to save changes.
  - **[Message]** – it is possible to change the sound of incoming message – press **upper left soft key** → **[Options]** → **[Change]** → select the sound and confirm by pressing **upper left soft key**. Press **upper left soft key** again → **[Options]** → **[Save]**, to save changes.
  - **[Message volume]** – in this option it is possible to change the volume of incoming message. Press **upper left soft key** → **[Options]** → **[Change]** and press “up” and “down” keys to set the volume level. Confirm by pressing **[upper left soft key]** → **[OK]**. Press **[upper left soft key]** once again → **[Options]** → **[Save]**, to save changes.
  - **[Keypad]** – press **upper left soft key** → **[Options]** → **[Change]** and select keypad sound, confirm by pressing **upper left soft key** → **[OK]**. Press **[upper left soft key]** → **[Options]** → **[Save]**, to save changes.
  - **[Key tone volume]** – change key tone volume - press **upper left soft key** → **[Options]** → **[Change]** and set volume level by pressing “up” and “down” keys. Press **[upper left soft key]** → **[Options]** → **[Save]**, to save changes.
  - **[System alert]** – press **upper left soft key** → **[Options]** → **[Change]** and enable or disable system alert, confirm with **upper left soft key** → **[OK]**. To save changes press **[upper left soft key]** → **[Options]** → **[Save]**

## **Alarm key (SOS) settings**

myPhone Halo 2 is equipped with SOS key located on the back cover of the phone.



To enable Alarm key enter **[Menu]** → **[Settings]** → **[SOS setting]**. The following submenu appears:

- **[Family numbers]** - you can type in 5 numbers. The phone will try to connect with these numbers after long pressing the Alarm key. Enter the numbers in selected fields. You can browse the numbers using the up and down keys. After entering all numbers, select **[Save]** → **[Yes]**. If there is no number entered in SOS Numbers, SOS Alarm sound starts after pressing SOS key.
- **[SOS]** - you can enter your own text in SOS message that will be sent to the specified number when you press the SOS button. To save your changes select **[Save]**.
- **[Status]** – enable or disable SOS Alarm. Select **On** or **Off** and save by pressing **[Ok]**.

- **[SOS SMS ON/OFF]** – enable or disable option of sending SOS sms messages. Select desired option and press **[Ok]**.
- **[Warning tone]** – enable or disable SOS alarm tone.

**We recommend** that one of saved family numbers is emergency services number. It would also be good to save your address in SOS message.

### Phone lock

To lock the keypad in standby mode press **upper left soft key** and **(\*) key**. Keypad is locked and display will go off after few seconds. Unlocking keypad is held the same way. The phone locks the keypad automatically when it's unused.

### Connectivity functions

#### *Making a phone call*

In standby mode enter the phone number using the numeric keypad. It is recommended to enter the area code and then the phone number.

Press **green handset key**, to establish a phone call.

Press **red handset key**, to terminate a phone call.

#### *Answering a phone call*

To answer an incoming phone call press the **green handset key**.

Press the **red handset key**, to reject / terminate a phone call.

## **Text messages**

### **Sending messages**

Select **[Menu]** → **[Messages]** → **[Write message]**.

Enter the text using the alphanumeric keypad. The characters are entered letter by letter. The phone doesn't have a dictionary.

The key <#> is used to select between different writing modes. There are the following modes available:

- ABC – only uppercase letters.
- abc – only lowercase letters.
- 123 – only digits.

In order to enter a special character, for example: a dot, a comma or a hyphen etc., press the key <\*> and select a symbol from the list or press the key <1> as many times as needed. To make a space between two words press the key <0>.

An example of entering characters:

To enter letter „b”, press the „2” key twice. To enter letter „d”, press the „3” key once, etc.

After entering the text of a message press upper left function key → **[Options]**, and select option **[Send to]**.

A list of options appears:

- **[Enter a number]** – enter a number using the numeric keypad

and press **<OK>**.

- **[Add from Phonebook]** – when you select this option, simply enter the first few letters of the contact name to search for it in the Phonebook.

Press **<OK>**, to confirm your choice. After entering a number / selecting a contact from Phonebook, select: **[Options]** → **[Send]**, to send a message.

### Message Displaying

Select: **[Menu]** → **[Messaging]** → **[Inbox]**, select a message from the list and press the **<green handset>** key → **[View]**, to read the message.

## **Phonebook in myPhone Halo 2**

### Add new contact

To add a contact select: **[Menu]** → **[Phonebook]** → **[Add new contact]**. Select a place for saving a contact: SIM card or phone.

Enter contact's data. You can customize a contact – assign a name, phone number, a photo and a ringtone.

Press **upper left soft key** → **[Options]** → **[Save]** to save a contact.

### Photo contacts

This option allows you to assign pictures of people to numbers and their quick and easy dialling right from wallpaper screen using the button **“down”**. There can be 8 Photo Contacts. To enter the number, press the upper left soft key → **[Options]** using the up and down keys select an option, then press the upper left soft key →

**[Edit]** and enter the name and phone number. Then select a photo for this number. After filling in all fields, press **[Options]** → **[Save]**.

### Search for contact

To search for contact select: **[Menu]** → **[Phonebook]**.

Enter first letter of contact`s name.

Contacts starting with this letter appear on the list. To search through these contacts simply use the navigation keys **<up>** and **<down>**.

After finding the desired contact and pressing **upper left soft key** → **[Options]** a list of options appears:

- **[View]** – view contacts details (name and number).
- **[Send message]** – send SMS.
- **[Edit]** – edit contact`s details.
- **[Delete]** – delete contact.
- **[Copy]** – to copy contact from SIM card to phones memory.
- **[Phonebook settings]** – select it to enter a menu of additional options such as preferred storage, speed dial or memory status.

### Delete contact

To delete all contacts, select: **[Menu]** → **[Phonebook]** → **[Options]** → **[Phonebook settings]** → **[Delete all contacts]** **[Ok]**.

To delete a single contact select: **[Menu]** → **[Phonebook]** →

search for contact you want to delete → **[Options]** → **[Delete]** → **[Yes]**.

### **3. Advanced features**

#### **Call a contact from Phonebook**

To establish connection with contact saved in **[Phonebook]** submenu perform the following steps:

In standby mode select **upper left soft key**.

Search for contact on the list (by entering the name or contacts number), and establish a phone call by pressing **<green handset>** key - select **[Call]**.

#### **Missed calls**

All missed calls are shown on phone`s display.

A message about a missed call appears on display.

To check who phoned:

Enter **[Call history]**. Select **[Menu]** → **[Call history]** → **[Missed calls]**.

To call this number press the **green handset key**.

#### **Loudspeaker**

During an active phone call **[H-Free]**, to activate loudspeaker mode.

#### **International calls**

In standby mode press and hold **0 key** on numeric keypad until a



„+” appears on display.

Enter a full number (country code, city code and contact number) and press the **<green handset> key**, to make a phone call.

## **4. Other features**

### **Date and time setting**

To set date and time select the following option:

[Menu]→ [Settings] → [Phone settings] → [Time and date].

Select **[Time and date]**, confirm with **[OK]** by pressing **upper left soft key**.

Enter current time using the numeric keypad. With navigation key <down>, enter current date, confirm by selecting **[Save]** with upper left soft key.

In **[Set format]** option select the appropriate type of date and time you want to perform on display.

**[Update with time zone]** enables automatic date and time setting according to operator`s data.

### **Language setting**

To set or change the Menu language, enter option: **[Menu] → [Settings] → [Phone settings] → [Language]**.

Select language from the list.

## **Display settings**

**[Menu] → [Settings] → [Phone settings] → [Display]:**

- **[Wallpaper]** → **[System]** (if you want to view system wallpapers) or select **[User defined]** (if you want to add your own wallpaper from micro SD card), then select an image from the list. To see a preview of chosen wallpaper select **<OK>**.
- **[LCD backlight]** – set the brightness and the backlight time before it turns off automatically.
- **[Show date and time]** – enable/disable showing date and time on the main screen.

## Call settings

Available in **[Menu] → [Settings] → [Call settings] → [Advanced settings]**. There are the following settings available: Blacklist, Whitelist, Auto redial, call time reminder, Answer mode.

- **[Blacklist]** – numbers added to this list may be blocked. This option can be enabled in Advanced settings.
- **[Whitelist]** - Here you can add numbers to the white list. The numbers in the white list will not have a name displayed during phone call or in received message. Instead the name only a number will be shown.
- **[Auto redial]** – automatic reconnecting with selected number if there was no answer before.
- **[Call time reminder]** – in this option, we can select a single or periodic reminder. As a reminder, the phone plays a short sound through the earphone. In settings you can personally identify:
  - a single reminder of 1 to 3000 sec.

PL

- periodic reminder every 30 - 60 seconds.

- **[Answer mode]** – you can set an option of answering the phone with any key.

### **Alarm configuration**

In Menu select **[Organizer]**.

Select **[Alarm]** from the list using **[OK]** key.

Select any item from the list of alarms and press **[Edit]**.

Using **[Status]** option turn on (or off) the alarm. Changing the status is held with **# and \*** keys.

After pressing <down> key the following list appears:

- **Time** – set the starting time for the alarm;
- **Snooze (min)** – the alarm is delayed when the snooze is activated;
- **Repeat** – Here you set the repeat options. Once, daily or on selected days.
- **Alarm tone** – you can change the alarm tone.
- **Alert type** – you can change the alarm type. There are the following options available: ring only, vibration and ring, vibration only.

To set the alarm select **[Save]**.

## **Calculator**

Select [**Organizer**] in **Menu** mode.

Enter [**Calculator**] using upper left soft key.

Basic arithmetic operations can be performed using the alphanumeric keyboard (typing numbers, digits).

Actions operator can be set by using navigation key (<up>, <down>).


Press **upper left soft key** to see the result.

## **Factory settings**

To restore factory settings, select in Menu mode: [**Settings**] → [**Restore settings**].

Password for restoring factory settings: **1234**.

## **Flashlight**

Slide the side slider to enable flashlight . Switching on and off the flashlight is held only when you move the slider.

## **Camera**

To enter camera mode, go to: [**Menu**] → [**Multimedia**] → [**Camera**], press upper left soft key [**Ok**].

Press the key **up** in order to take a picture.

After entering **[Options]** with **upper left soft key** the following list of options appears:

- **Photos** – option allows you to view captured images.
- **Camera settings** – you will find options like Anti-flicker and Delay timer in here.
- **Image settings** – you can set image size (in pixels) and image quality.
- **White balance** – adjust the white balance to the light source. Use this function to get a better colour that affects images quality.
- **Scene mode** – choice between night mode and automatic mode. Night mode supports the visibility of shots in the dark;
- **Storage** – here you can define a path for image storage (choose between a micro SD memory card, and phone memory);
- **Restore default** – restores camera`s factory settings.

Use **up**, **down**, **\*** (left) and **#** (right) keys to navigate the camera.

### **Call history**

There is a **[Call history]** available in the phone. It is located in **[Menu]** → **[Call history]**. You can view the history of calls that were made, received, etc..

Submenu contains the following items:

- Missed calls
- Dialed calls

- Received calls
- Delete call logs

### **Audio player**

You will find audio player in: **[Menu]** → **[Multimedia]** → **[Audio player]**. It plays MP3 files located on the memory card. To play audio files they should be saved on memory card micro SD in **My Music folder**. They will be added to playlist automatically.

The following keys are used to operate the player:

Key	Function
<b>#</b>	Volume up
<b>*</b>	Volume down
<b>4</b>	Previous
<b>5</b>	Play / pause
<b>6</b>	Next

- When you turn on the audio player in the lower left corner there an option **[List]** appears, with all available tracks. If you enter **[List]** submenu in the lower left corner, there are the following **[Options]** available: you can refresh the list or turn on the player's settings: Settings available after entering **[List]** → **[Options]** → **[Settings]**:

PL

- Auto generated playlist - enable/disable auto generated playlist
- Repeat – repeat the track
- Random play – enable/disable random play
- Play in background – play music in background.
- Audio effect – select audio effect modifying the sound of audio player.

### **FM radio in myPhone Halo 2.**

In Menu mode select: **[Multimedia]** → **[FM radio]**.

Select: **[Options]** → **[Auto search]** → **[Select]** in order to search for available radio stations.

All radio stations will be saved in **[List of channels]** folders.

Radio volume control is held with the use of \* and # keys.

Key	Function
<b>down</b>	Automatic scan for radio station at a lower frequency
<b>up</b>	Automatic scan for radio station at a higher frequency

To turn off the radio you need to mute it and press the **red handset key**.

To play in background enter **[Options]** in FM radio mode → **[Settings]** and select option „**play in background**“. Enable or disable this option using **#** and **\*** **keys** on the keypad.

## **Calendar**

There is a calendar available in myPhone Halo 2. You may check the current date.

To enter the calendar, select: **[Menu]** → **[Organizer]** → **[Calendar]**.

You may add events to calendar and a reminder. Use **up**, **down**, **\*** (left), **#** (right) keys to move between the dates.

Press upper left soft key on selected date, and **[Add event]**. A list of options appears:

- **[Subject]** – enter the subject of the event.
- **[Start]** – date and time to start.
- **[End]** – finish date and time.
- **[Type]** – type of an event (reminder, meeting, anniversary, birthday).
- **[Alarm]** – set an alarm for the event, and select how far in advance do you want it to take place.
- **[Repeat]** – you can set a repetition for this event.
- **[Location]** – you can enter the venue.



- **[Details]** – enter details of the event.

Reminder appears on display at the time it was set to start. The sound of the alert will be the same as the ringtone for incoming calls (**[Menu]** → **[Settings]** → **[Profiles]** → **[Options]** → **[Customize]** → **[Alert type]**).

## **Bluetooth**

There is a Bluetooth module available in myPhone Halo 2. It is used to connect wirelessly with devices equipped with Bluetooth function.

You will find the Bluetooth module in: **[Menu]** → **[Organizer]** → **[Bluetooth]**. There the following options:

- **[Power]** – pressing **upper left soft key** to enable/ disable Bluetooth radio broadcasting. A blue icon with letter “B” on the main screen indicates that Bluetooth module is on.
- **[Visibility]** – enabling this feature allows other devices with Bluetooth technology to see us on the list of available devices.
- **[My devices]** – you can find **[Search new device]** option here. It allows us to display a list of available Bluetooth devices within range. It is possible to connect to devices available on the list.
- **[Search audio device]** – This option allows you to search and connect your phone to an audio device using Bluetooth technology - for example - wireless Bluetooth headset.
- **[My name]** – allows you to enter the name under which the device will appear when you connect to other Bluetooth devices. The default name is myPhone Halo 2.
- **[Advanced]** – This option lets you set the sound transmission between Bluetooth headset and the phone (**[Audio path]**) and

display the MAC address of the phone ([My address]).

### Pairing Bluetooth devices.




To connect with other Bluetooth device, select it from the list of available devices **[Menu]** → **[Settings]** → **[Bluetooth]** → **[My device]** → **[Search new device]**, then select device from the list of available devices and press **[Pair]**. Statement asking if **Passcode matched?** appears on both devices. Press **[Yes]**. Devices are connected.

### Sending files via Bluetooth.






To send file to device that we are connected with (paired), enter: **[Menu]** → **[File Manager]** → **[Memory card]** → select a file you want to send, mark it and select **[Options]** → **[Send]** → **[via Bluetooth]**, and search for device on the list of paired devices. When receiver accepts the file – it will be sent. If no device is paired, you will be able to enter the device search.

Please remember to turn off the power after using Bluetooth as it wears out the battery very quickly, and frequent charging will shorten its life.

### Icons in myPhone Halo 2

	GSM network
	Battery status
	„Silent” mode enabled

PL

	„General” mode enabled
	Alarm
	Missed call
	New message
	Bluetooth is ON

### **Troubleshooting**

Alert	Sample solution
Insert SIM card	Make sure that your SIM card has been properly installed.
Enter PIN	If your SIM card is secured by a PIN code, enter a PIN after turning on the phone and confirm it by pressing <OK> key.

Network error	In areas where there is a weak signal or reception, making and receiving calls may be impossible. Move to another location and try again.
---------------	---

It is impossible to establish a connection

- *Make sure that the device can access the network, and that the outgoing calls are not blocked. Also check if the number you are trying to connect to is on the Blacklist.*

Nobody can get through to myPhone Halo 2.

- *The phone must be switched on, make sure that the number you are trying to connect with is not on the list of blocked numbers (Blacklist). Make sure that the function of blocking incoming calls is not locked.*

You cannot hear the caller / caller cannot hear myPhone Halo 2 holder.

- Microphone should be placed very close to your mouth;
- Check if the build in microphone or speaker have not been covered;
- If you use the headset check if it has been properly connected;
- Make sure that the speaker and the microphone have not been covered;

Poor sound quality during a phone call.

- Make sure that the speaker and microphone are not covered. Try to adjust a distance from your head during calls. Check whether the phone is in range of a network. Call quality is

PL

affected by the obstacles encountered by radio waves. Try to think of incoming calls, like the reception of radio waves by radio.

It is impossible to establish a phone call.

- Check if the entered number is correct.
- Check if the number in **[Phonebook]** is correct.
- If it is necessary, enter the number once again.

## **5. Care and maintenance**

### **Proper battery use**

The battery is powered via a charger. If the battery level is low, charge it. To extend battery life, let it be up to land before connecting to the charger.

If you are not using a charger, disconnect it from the phone. Overcharging will shorten battery life.

Battery temperature affects the quality of charging.

Before you start charging, the battery can be cooled or heated so that it's temperature is similar to the standard conditions of peace. If the battery temperature exceeds 40 degrees, the battery cannot be charged!

If the battery warms up too much the phone will inform you that temperature is too high.

Use the battery only for its intended purpose. Avoid leaving the battery in the magnetic field as it can shorten it's life.

Do not use the battery if it has been damaged.

Battery life may be shortened if it is exposed to very low or very high temperatures, this causes interference to the phone, even if the battery is charged properly. Do not dispose used battery in a fire! Do not throw away old, unused battery - send it or return to an authorized recycling collection site.

### Care and maintenance

To extend life of your device, follow the guidelines:

Keep the phone and its accessories out of reach of children.

Avoid very high temperatures; it could shorten electric components life, melt plastic parts or destroy battery.

Do not attempt to disassemble the device. Unprofessional interference in the structure of the phone can severely damage or destroy it.

Do not use a high concentration of acidic or alkaline for cleaning your phone;

Use only original accessories; violation of this rule may invalidate the warranty.

Exposing your phone to extreme temperatures can reduce the level of protection. It is recommended to not to use the phone in temperatures lower than 0 ° C / 32 ° F or higher than 40 ° C / 100 ° F.

## **Safety information**

While using your phone, consider regulations concerning user and environmental safety.

### **Safety while driving**

Apart from emergency situations, headset should be used always while driving a car. This will ensure safety during a phone call – the movements won't be restricted. If you do not have a headset, and you need to use the phone, pull over and stop the car.

Please take into account regulations concerning using a phone while driving.

Certain electronic components of the car, without adequate protection, may be affected by the phone. It is advisable to use your phone in the car only when the external antenna of the vehicle is properly secured. Use the services of a specialist when installing your phone in the car.

### **Environment safety**

Refer to the regulations in the use of mobile phones.

Turn off the phone in places where its use is prohibited or where it may cause disruption and danger. Using any devices that use radio waves can cause interference to medical devices (e.g. stethoscope, or pacemaker), if they are not properly secured (if in doubt, consult your physician or medical device producer).

**\*Attention:** In places with high risk of explosion (e.g. Petrol stations, chemical plants, etc.) it is advisable to turn off the phone. Check out the regulations governing the use of GSM equipment in

these places.

Technological criteria

Network: GSM 900/1800, 850/1900 MHz

Some services may depend on your service provider, the state of the local GSM network, version of your SIM card and the way you are using your phone. For more information contact your service provider.

Adnotation	Statement
<p>The manufacturer is not responsible for the consequences of the situation caused by improper use or non-compliance to the above recommendations.</p>	<p>The software version can be improved without prior notice.</p>

**Certification Information (SAR)**

This phone meets European Union (EU) requirements concerning exposure to radio waves. Your mobile phone is a radio transmitter and receiver. It is designed and manufactured to not exceed the limits for exposure to radio-frequency (RF) energy, as recommended by the EU Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed



by independent scientific organizations through the periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as Specific Absorption Rate SAR (Eng. Specific Absorption Rate).

SAR limit recommended by the Council of the European Union amounts to 2.000 W/kg and concerns value averaged over 10 grams of tissue.

The highest SAR value for myPhone Halo2 is **0,421 W/kg**.

### **Proper disposal of used electrical and electronic equipment**



The device is marked with the symbol of crossed-bin, in accordance with European Directive 2002/96/EC on waste electrical and electronic equipment (Waste Electrical and Electronic Equipment - WEEE). Products marked with this symbol after a period of use should not be utilized or disposed of with household waste.

You must dispose electrical and electronic equipment, providing these to the designated point at which such hazardous wastes are subjected to a process of recycling. Collecting this type of waste in enclosed places and the correct process of recovery help to protect natural resources. Proper recycling of waste electrical and electronic equipment has a positive impact on human health and the environment

In order to obtain information about where and how to safely dispose of electrical and electronic equipment waste, users should contact the appropriate authority of the local authorities, waste

collection point or point of sale where the equipment has been purchased.

 
### **Proper disposal of used batteries**

In accordance with EU Directive 2006/66/ec on battery disposal, this product is marked with the following symbol:



This symbol indicates that batteries or accumulators used in this product should not be disposed of with normal household waste, but treated in accordance to the Directive and local regulations.

Do not  
together  
batteries  
network  
enables

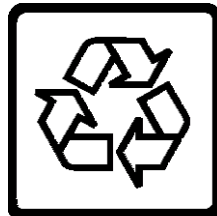

**Li-ion**

dispose of batteries and accumulators with unsorted municipal waste. Users of and accumulators must use available reception of these elements, which them to return, recycling, and disposal.

Within the EU, collection and recycling of batteries and accumulators shall be subject to separate procedures. To learn more about existing procedures in the area of recycling batteries, please contact your local city office, an institution for. Waste or landfill.

### **Declaration of conformity with EU Directives**

# CE 2200

myPhone Sp. z o.o. declares that this product complies with the essential requirements and other relevant provisions of European Directive 1999/5/EC.